Nestie | Coffee Nestie | Partners SOLUTION<mark>S L</mark>AB

On this card you'll find instructions for setting up a Bunn® CW15 APS Pourover Airpot Brewer

Instructions




- Set brewer on the counter.
- 2
- Do not plug in yet.
- 3 Make sure the element switch located on the back or side of the brewer (C) is in the "OFF" position until tank has been filled or you will damage the brewer.
- 4 Place container under the sprayhead to catch extra water.
- 5 Slowly pour water into the top of the brewer (A) until it starts coming out of the sprayhead. This will take a couple containers depending on the size of container used to pour water in the brewer.
- 6 Once water is coming out of the sprayhead stop pouring water in as the tank is full.
- 7

9

Let water finish dripping from the spray head.

- 8 Plug in brewer **(B)**.
 - Turn the element switch located on the back or side of the brewer **(C)** to the "ON" position, this turns on the elements that heat up the water.
- 10 Wait for green ready light (D) to brew, it will take 20–30 minutes to warm up for the first brew.

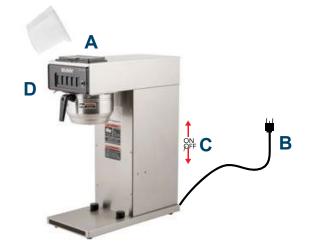

Note — Measure out water (amount listed below by brand) in pitcher then mark with a permanent marker to show where to fill pitcher to when brewing a batch of coffee.

Starbucks	Seattle's Best	Torrefazione
Coffee [®]	Coffee [®]	Italia [®]
Pour 3.3L	Pour 2L	Pour 2L





Step 8



Step 10



