COLD BREW & NITRO COUNTERTOP SYSTEM

Intake Hose Elbow Replacement Instructions



Below are step-by-step instructions on how to replace an elbow coupling located on either end of the Intake Hose Assembly for the Cold Brew & Nitro Countertop System.




3/8 PTF Valved Elbow Coupling Insert




Slide the chrome nut over the end of the Intake Hose



Slide the nut up the Intake Hose and screw onto the elbow coupling in a clockwise direction until tight

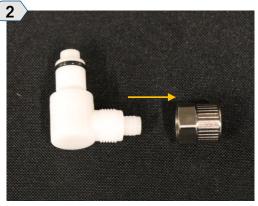

Remove the chrome nut from the elbow coupling by unscrewing it in the counterclockwise direction

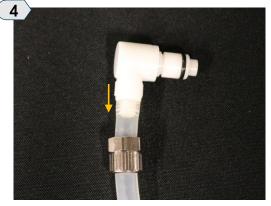

Insert the barbed end of elbow coupling into the Intake Hose.